

HAWKINSON NDT-II PROBE ADJUSTMENT ALL MODELS

- Remove all power from the machine before beginning.
- Make all adjustments with the swingarm moved in, and a tire on the machine.
- Center the probe head left-to-right inside the tire.
- The probe head should track straight inside the tire, not pull or point to one side or the other.
- Adjust the probe head front-to-rear so that with the swingarm all the way in, the probe head bearing wheels touch the ground roller at the point where the tire makes contact with the ground roller.
- Trim the ball chains so that they are even across the bottom, and trim them to taper back at the ends of the probe head.
- Double-check all electrical connections! Is the high-voltage wire in good condition? How about the sidewall wires?

